

IP Camera Setup Guide for Milestone NVR

Our camera integrates easily with Milestone NVR's, you must use version 7 or 8 and higher.

Version 65F is known not to function properly

First follow the [IP Camera Quickstart Guide](#) and make sure you can browse and access the cameras you want to connect to your NVR.

Launch Milestone NVR software.

Select [Add hardware](#), Use [Express Setup](#).

Search for the cameras on the network. Milestone will display a list of all cameras found on the network.

Enter the Username & Password you used to setup the cameras previously.

Select the cameras you want to use (checkmark)

Verify the connection. If you get a failure the first time, please retry the connection.

Tip:

In the camera you can set the stream configuration for the video quality and network traffic that works best with your installation. Using VBR will help conserve bandwidth.

The camera Clock Date and Time Zone must be set to the Milestone server.